


Wiring Diagram Junction Box Style (Type -10)

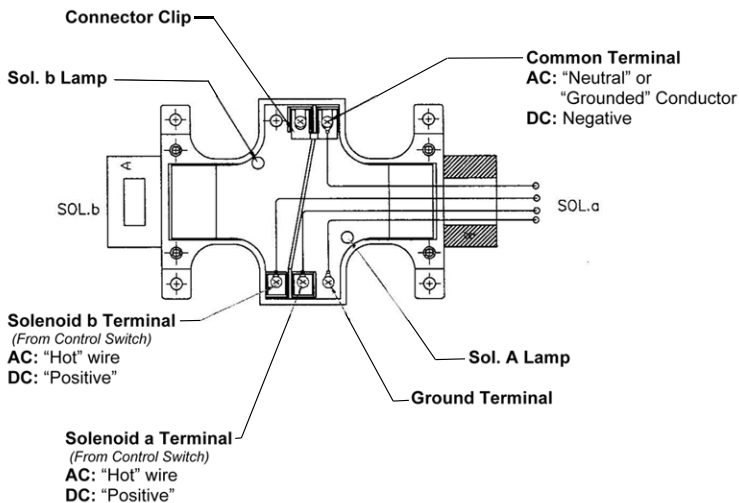

Notes:

If the connector clip is attached for a double solenoid valve, only one common wire needs to be connected. Removing the Connector Clip will re-configure the box for two separate terminals.

Use the ground terminal when grounding is required